 


# VCR-4

## TELECINE ADAPTOR

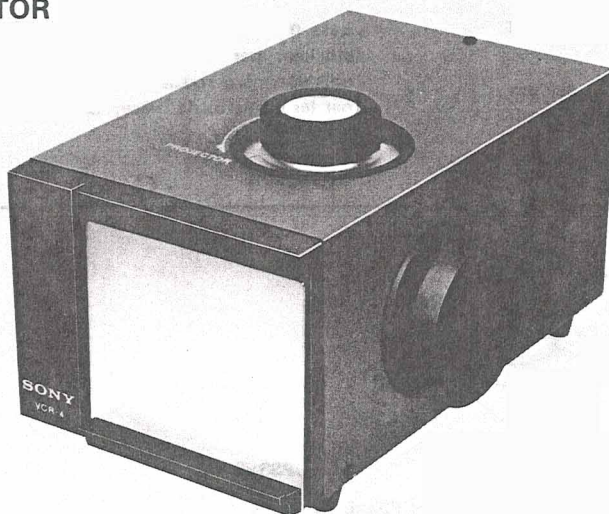

*US Model  
Canadian Model  
AEP Model*

### SPECIFICATIONS

<b>Camera minimum focus:</b>	1-inch camera: approx. 54 mm 2/3 inch camera: approx. 38 mm The HVC-1000, HVC-2000, HVC-2010, HVC-2000P or HVC-2010P Sony Color Video Camera is recommended.
<b>Projector:</b>	Motion-picture projector
<b>Screen size:</b>	100 x 75 mm
<b>Input ports:</b>	2 (projector and telop)
<b>Optical axis height:</b>	140 mm (on the supplied carton)
<b>Telop card size:</b>	101 x 76 mm to 110 x 82 mm usable recording area: 100 x 75 mm
<b>Telop illumination:</b>	Frosted tungsten lamp, 40 W at 50 cm
<b>Dimensions:</b>	Approx. 192 x 163 x 285 mm (w/h/d) (7 <sup>5</sup> / <sub>8</sub> x 6 <sup>1</sup> / <sub>2</sub> x 11 <sup>1</sup> / <sub>4</sub> inches) including projecting parts and controls
<b>Weight:</b>	2.9 kg (6 lb 6 oz)
<b>Supplied accessories:</b>	Cartons (used as stands)

### LOCATION AND FUNCTION OF PARTS

 
 
#### Screen cover

Focus the 8-mm film projector to this cover. Be sure to remove this cover before recording.

#### Input select knob

TELOP: to record a telop card or photo

PROJECTOR: to record from the projector

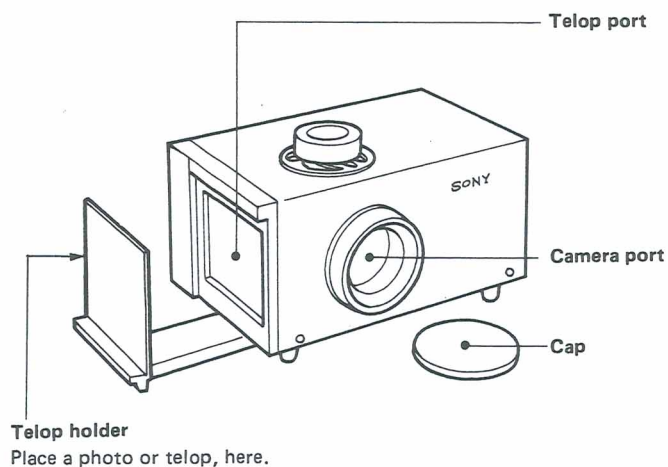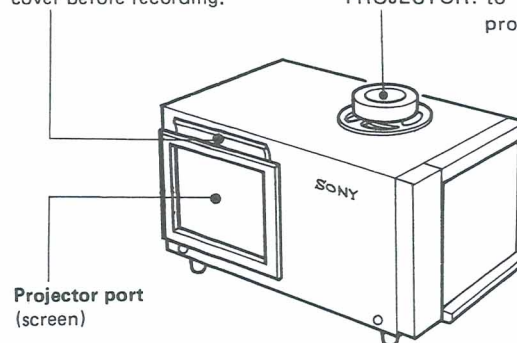

# SONY®

 
## SERVICE MANUAL

- Les pièces qui possèdent une marque "▲" ne sont pas stockées parce qu'elles sont rarement nécessaires pour un dépannage routine. Si nécessaire, demander les pièces par les numéros de pièce; seulement il prendra du temps pour arriver.



<u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
1	A-7613-008-A	FRAME ASS'Y, ornamental	
2	A-7613-009-A	MIRROR (A) ASS'Y	
3	A-7613-010-A	MIRROR (B) ASS'Y	
4	A-7613-012-A	LENS ASS'Y -----	21
5	●X-2256-001-0	PLATE ASS'Y, mirror	
6	2-256-007-00	ESCUTCHEON	
7	●2-256-008-00	PACKING	
8	2-256-009-00	SCREEN	
9	2-256-010-00	PLATE (1), telop	
10	2-256-011-00	RETEINER, telop	
11	2-256-012-00	HANDLE	
12	2-256-013-00	BEARING, rotary	
13	●2-256-015-00	ANGLE (2), rail	
14	●2-256-016-00	ANGLE (1), rail	
15	●2-256-017-00	CHASSIS, upper	
16	2-256-023-00	FRAME, screen	
17	2-256-024-00	PLATE, slide	

<u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
18	2-256-025-00	COVER	
19	●2-256-027-00	CHASSIS, lower	
20	●2-256-028-00	SHAFT, fulcrum	
21	2-256-032-00	RETAINER, lens	
22	2-256-033-00	HOOD	
23	2-256-034-00	CAP, hood	
24	2-256-035-00	PROTECTOR	
25	2-256-036-00	SHAFT, stopper	
26	●2-272-706-00	LABEL, model number	
27	2-272-707-00	LENS	
28	●3-634-299-00	STRIP, guide	
29	●3-637-219-00	GUIDE FOOK, circuit board	
30	3-701-447-21	WASHER, 10	
31	3-701-506-01	SET SCREW, double point 3 x 4	
32	3-794-829-21	CARD, holder	
33	3-829-642-XX	FOOT, rubber	
34	3-880-545-00	KNOB, SW dial	
35	3-880-553-00	RUBBER, SW dial knob	
36	3-880-557-00	SPRING	

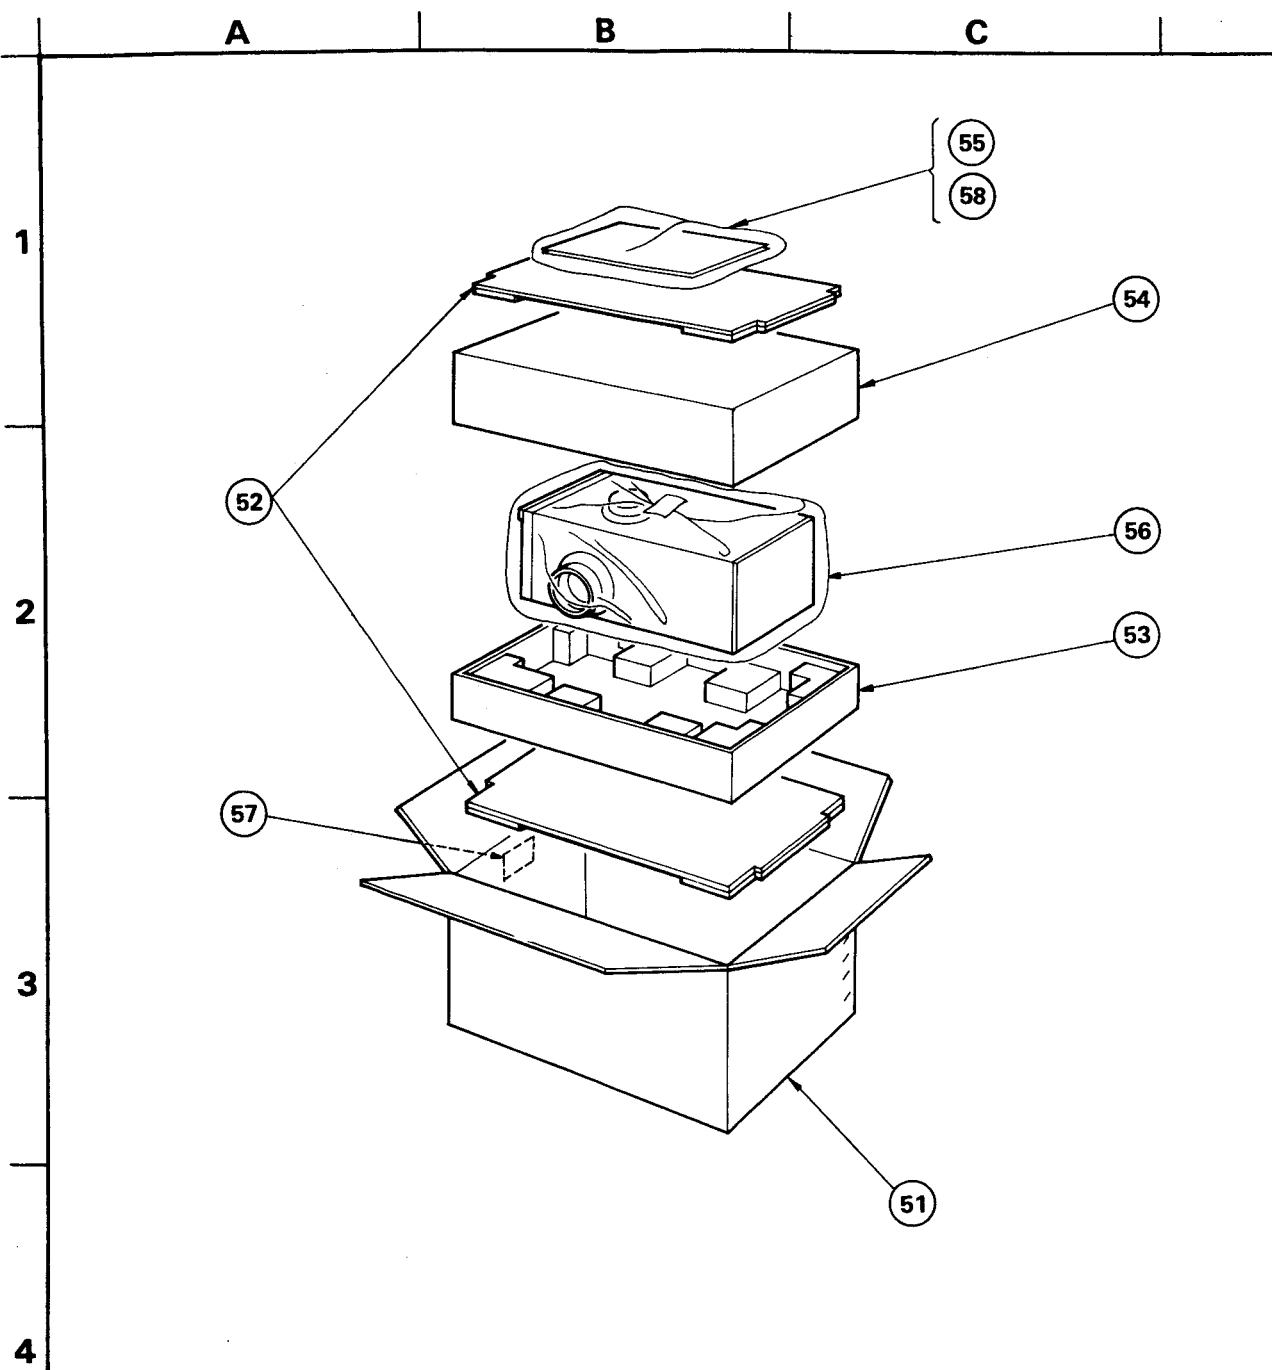

<u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
51	2-272-701-00	INDIVIDUAL CARTON	
52	2-272-703-00	PAD	
53	2-272-704-00	CUSHION (LOWER)	
54	2-272-705-00	CUSHION (UPPER)	
55	3-701-626-00	BAG, polyethylene	
56	3-701-637-00	BAG, polyethylene	
57	3-703-163-00	LABEL, destination	
58	3-783-170-21	MANUAL, instruction	

**Sony Corporation**

© 1980